


Araknis Access Point In-Ceiling Bracket Installation Guide

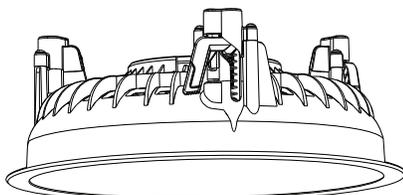

1. Use the provided cutout template to cut a hole in the ceiling. The AN-ACC-ICBKT-SR for APs with a 201mm (7.69") diameter or the AN-ACC-ICBKT-LR for APs with a diameter of 251mm (9.52".)


Note: The minimum depth for the bracket to fit in the ceiling is 4."




Disengage




2. Disengage the dog ears on the bracket. Use a #2 Phillips head screwdriver to push the dog ear back and turn it counter-clockwise.

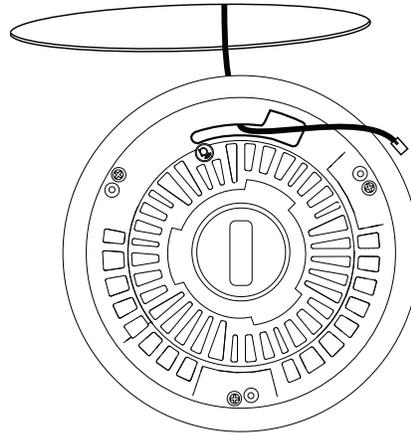


3. Pull the category cable through the mount's cable management hole. If the mount must be tied off, use the safety strap bar at the top of the mount.

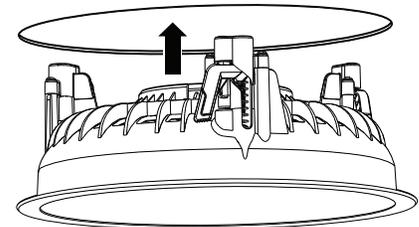


Engage

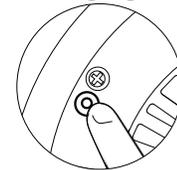


4. Place the mount in the hole and press the three buttons to engage the dog ears.

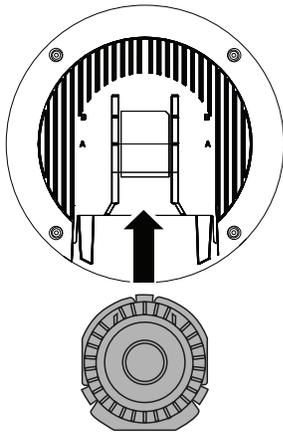

5. Slide the adapter on to the AP. It clicks twice.

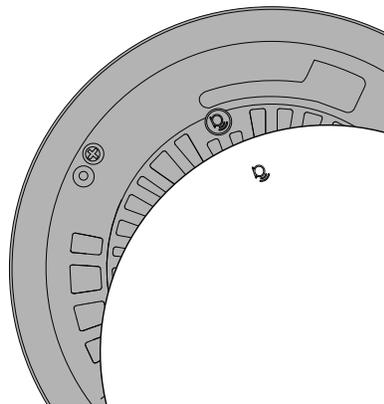

6. Connect the category cable to the AP, then align the Araknis logo under the mount's cable management hole and the logo on the AP to help you guide the AP into place.

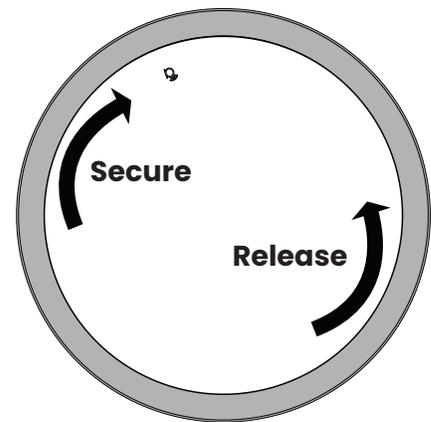

7. Gently push the AP and turn it clockwise to lock it into place. To release the AP, gently push and turn it counter-clockwise.