




## Install and maintain batteries

### To install the batteries:


- 1 Install the four AA alkaline batteries (included) into the back of the remote according to the diagram in the battery compartment (with the + terminals pointing toward the bottom of the remote).

 **Important:** The use of rechargeable AA batteries is not supported. Using rechargeable AA batteries may result in inaccurate battery gauge readings.


### Battery use and care tips

- Keep battery contacts and compartment clean.
- Remove batteries if the remote is not expected to be used for several months.
- Do not mix new and old batteries.
- After removing old batteries, wait 20 seconds before inserting new batteries.
- Extreme temperatures reduce battery performance. Avoid putting the System Remote Control in very warm places.

### Battery replacement safety rules

 **CAUTION!** To prevent battery shorting, leakage, or rupture:

- Use typical AA Alkaline batteries only.
- Do not mix battery types.
- Do not attempt to recharge a battery unless the battery is specifically marked “rechargeable.”
- Never dispose of batteries in a fire.

 **ATTENTION !** Pour empêcher court-circuiter, fuite ou rupture de batterie :

- Utilisez les accumulateurs alcalins typiques d'AA seulement.
- Ne mélangez pas les types de batterie.
- N'essayez pas de recharger une batterie à moins que la batterie soit spécifiquement marqué « rechargeable ».
- Ne vous débarrassez jamais des batteries dans un feu.

## Using the on-screen TV interface

### To use the on-screen TV interface with the remote:

- 1 Press the red **Control4** button. The TV's interface opens.
- 2 To navigate through the on-screen interface menus, press the directional buttons, and press the **SELECT** button to make your selection.

## Using the remote's List interface

### To control devices from the remote control:

- 1 On the remote, press **LIST** to access the List interface. *Lighting, Comfort, Security*, and other options appear.
- 2 To navigate through the List interface and the Control4 system, press the arrow buttons to scroll through the menus, then press the **SELECT** button to make your selection.



help.control4.com

## Using the WATCH and LISTEN buttons

The WATCH button can be configured to quickly select the last video source watched or display a list of video sources for the room.

The LISTEN button can be configured to quickly select the last audio source played or display a list of audio sources for the room.

## Changing selected rooms

Depending on the room selected on your remote, the remote's buttons may behave differently and the List interface may have different options. For example, with **Living Room** selected, the ●●● button may have been programmed to dim the lights, but with **Theater** selected, ●●● may turn them completely off.

### To change rooms on the remote:

- 1 Press **List**, then select **Location > Floor > Room**.

## Changing preferences

### To change the remote's preferences:

- 1 Press **LIST**, then select **Settings**, then **Config**.
  - To change the List interface's brightness or the keypad brightness, select **Display Brightness** or **Keypad Brightness**, press the arrow buttons to adjust, then press **SELECT**.
  - To change the remote's sensitivity to motion (to wake it from sleep mode), select **Motion Detect**, then select the sensitivity level.
  - To enable or disable the ambient light sensor, select **Light Sensor**, then select **On** or **Off**.
  - To change the List interface's text color, select **Text Color**, press the arrow buttons to pick the color, then press **SELECT**.
  - To check the battery charge, select **Battery Level**.
  - To return the remote's preferences to factory defaults, select **Factory Defaults**.

## Regulatory and safety information

To review regulatory information for your Control4 products, see [ctrl4.co/reg](http://ctrl4.co/reg).

## Warranty

Limited two-year warranty. To review warranty details for your Control4 products, see [www.control4.com/warranty](http://www.control4.com/warranty).

## More help

For the latest version of this document and to view additional materials, open the URL below or scan the QR code.

